 


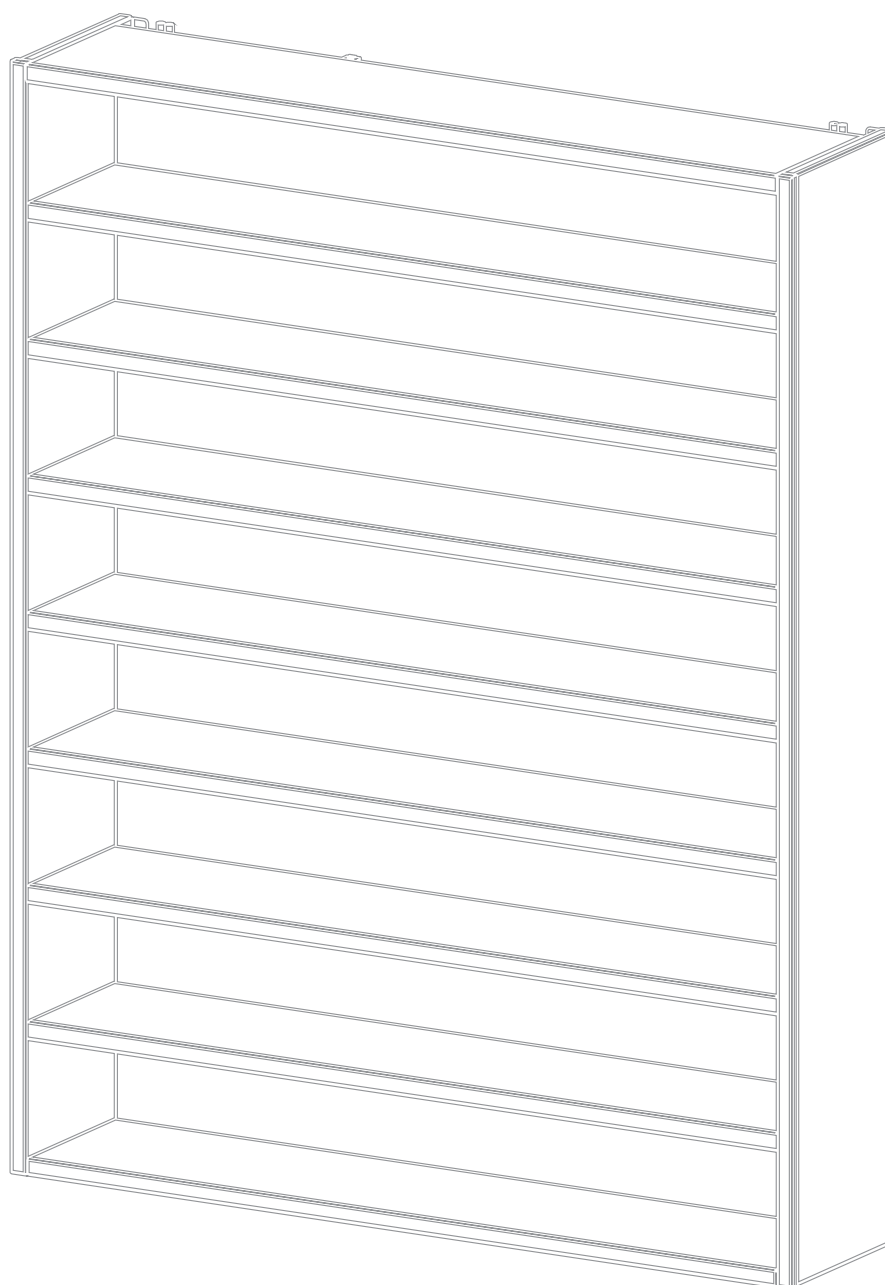

User manual

Manual del producto

P2: Safety instructions
P3: Contents
P4: Assembly instructions
P7: Application

SAFETY INSTRUCTIONS: CARRÉ STEEL 8X5

IMPORTANT SAFETY INSTRUCTIONS

Before using an electrical unit, basic precautions should always be followed, including the following:

DANGER - To reduce the risk of electric shock:

1. This SECURE DISPLAY SYSTEM contains electronic components.
Do not open these without a qualified electrician or an official Top Vision dealer.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Close supervision is necessary when this unit is used by, or near children, invalids, or disabled persons.
2. Use this unit only for its intended use as described in this manual.
Do not use attachments not recommended by the manufacturer.
3. Never operate this unit if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service center for examination and repair.
4. Never drop or insert any object into any opening other than the intended use of presenting sunglasses.
5. Do not use outdoors / for indoor use only!

MAINTENANCE INSTRUCTIONS - Instructions for cleaning and user maintenance operations:

1. The exterior of a SECURE DISPLAY SYSTEM may only be cleaned with a non-static brush.
2. The SECURE DISPLAY SYSTEM has no user serviceable parts. All malfunctioning or damaged components are to be replaced by a service representative duly authorized by Top Vision Group BV or an official Top Vision dealer.

INTENDED USE

1. The indented use of the Secure Display System is to display eyewear frames and sunglasses.
2. This product is for commercial use only.

P2: Instrucciones de seguridad
P3: Contenido
P4: Instrucciones de montaje
P7: Aplicación

INSTRUCCIONES IMPORTANTES DE SEGURIDAD: CARRÉ STEEL 8X5

Cuando se usa una unidad eléctrica se deben tomar precauciones básicas, incluidas las siguientes:

PELIGRO – Para reducir el riesgo de descarga eléctrica:

1. Este expositor contiene componentes electrónicos. No abrirlo sin la presencia de un electricista cualificado o un profesional de Top Vision.

AVISO – Para reducir el riesgo de quemaduras, fuego, descargas eléctricas o daños a personas:

1. Es necesaria la supervisión cuando la barra la usen niños o disminuidos.
2. Usar la barra única y exclusivamente para el uso descrito en el manual.
3. No encender esta unidad si el cable o el enchufe están dañados, si no funciona bien, si se ha caído o ha sido dañada o si ha tenido contacto con agua. Devolver el expositor al centro de servicio para su examinación y reparación.
4. Nunca intentar meter ningún objeto en ninguna de las cerraduras que no sea la tarjeta Top Vision.
5. No usar al aire libre, son para interior únicamente.

 
INSTRUCCIONES PARA EL MANTENIMIENTO DE LAS OPERACIONES:

Instrucciones para las operaciones de limpieza y mantenimiento del usuario


1. El exterior de un expositor sólo se puede limpiar con un cepillo no estático.
2. En ninguno de los expositores se pueden reemplazar las piezas. Todas las que no funcionen deben ser reemplazadas por personas totalmente autorizadas por TVG o por personal de TVG.

USO DEL EXPOSITOR


1. El expositor es para exponer gafas de sol y monturas.
2. Este producto es sólo para uso comercial.

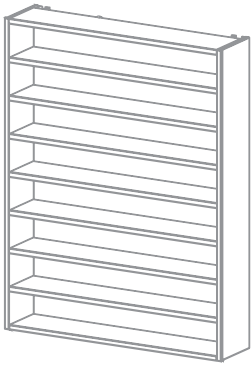

 
Carré with 8 steel shelves
art. CS.8X5.TW.TW-S-930
930 x 1206 x 243mm
1x

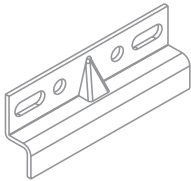

Mounting bracket
art. 24057
4x

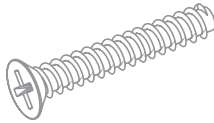 

Screw
art. 95003
5,0 x 45mm
8x

 

Wall plug
art. 95002
S8 x 40
8x

REQUIRED TOOLS

BENÖTIGTEN WERKZEUGE

 
HERRAMIENTAS NECESARIAS

OUTILS NÉCESSAIRES


BENODIGDE GEREEDSCHAPPEN




Hexagon wrench #4
art. 92047

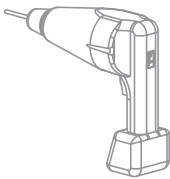


Drill Ø8mm

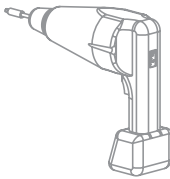 


Screwdriver P2

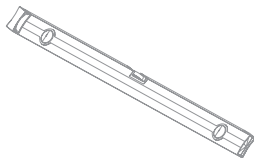 

Level

 


Pencil

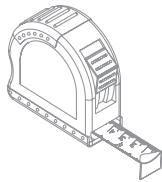 


Tape measure

 
1 Carré unit on wall
Drill instructions

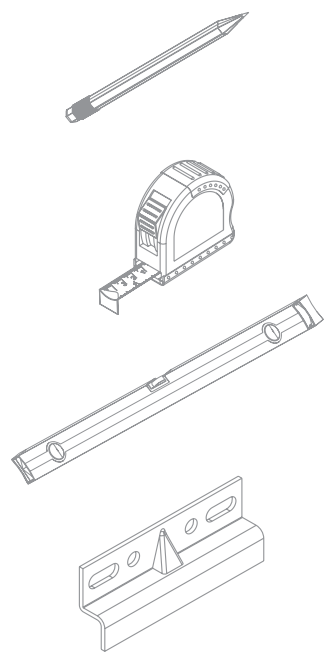


Mounting bracket
art. 24057
4x

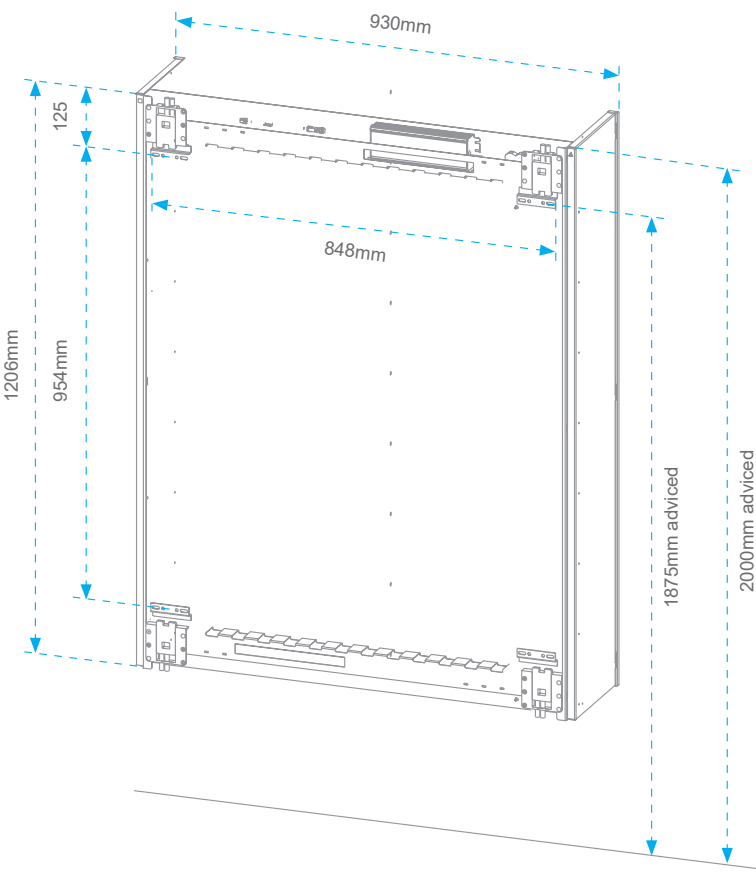 



2

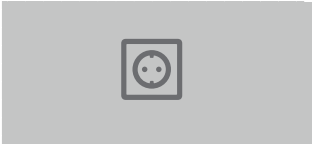 

Place electricity in the grey area

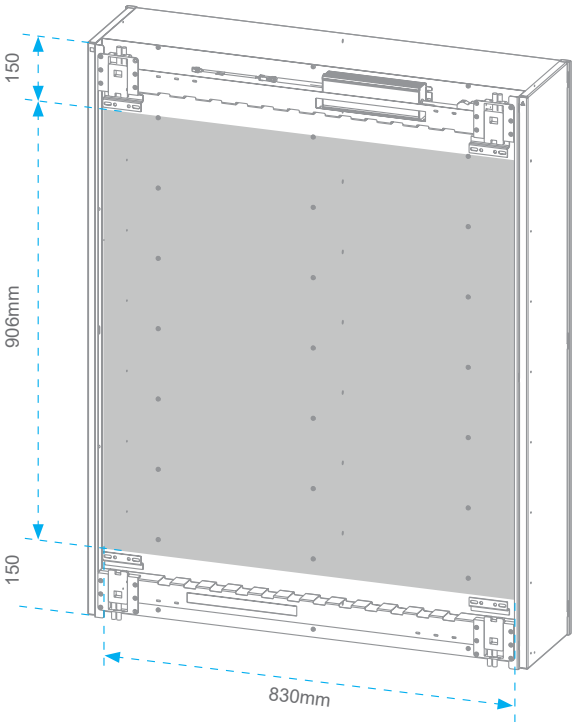 


3

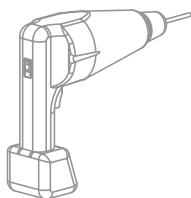  

Wall plug
art. 95002
S8 x 40
8x



A Ø2 mm - for assembly on a wooden panel
- para el montaje en un panel de madera

 B Ø8 mm - for assembly on a stone wall
- para el montaje en un muro de piedra


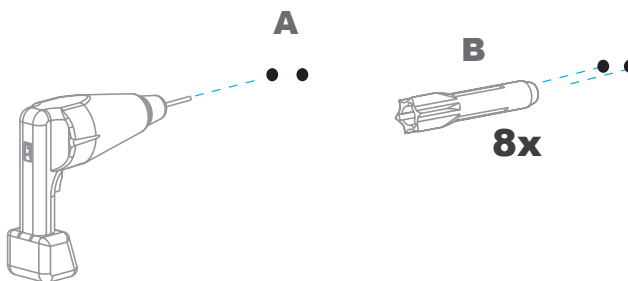


SPACE

  4

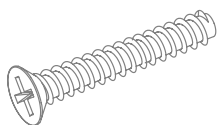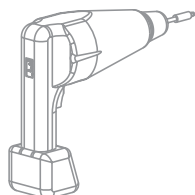



Screw
art. 95003
5,0 x 45mm
8x

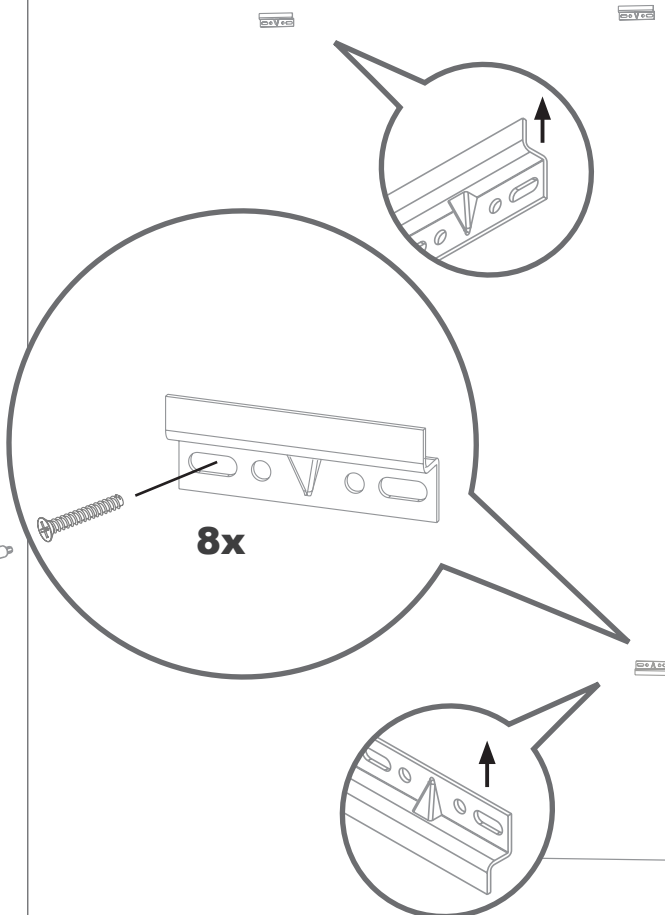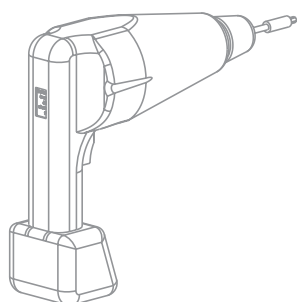  


5





 
 
Hexagon wrench #4
art. 92047

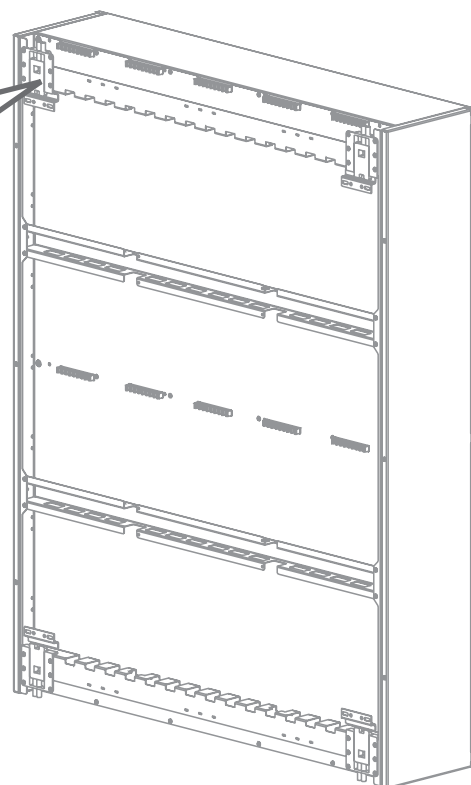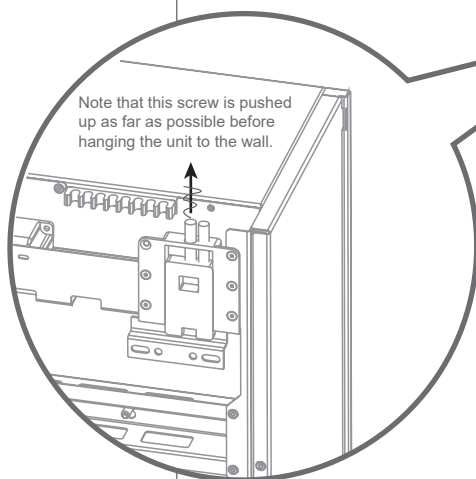





6

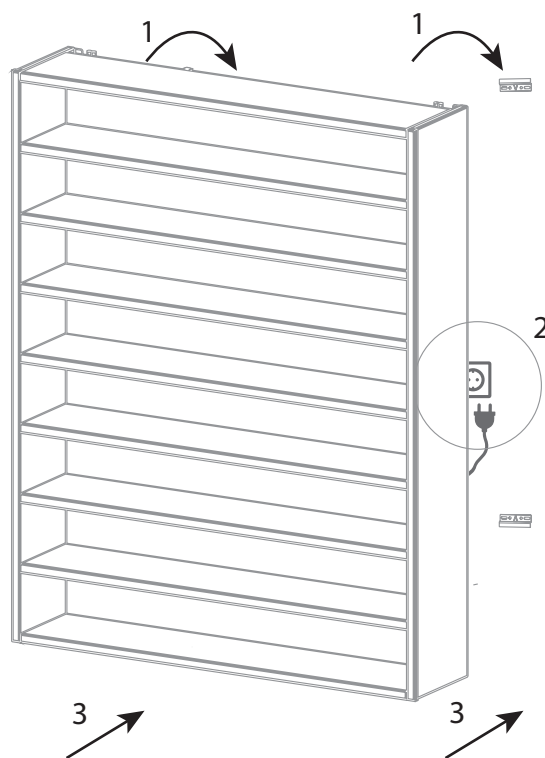 

7

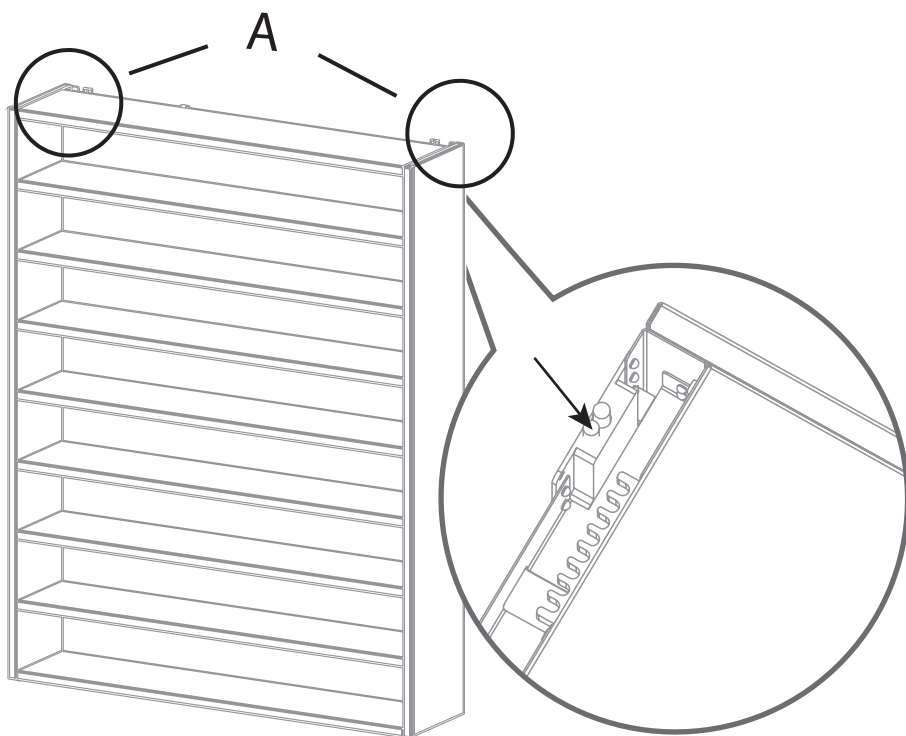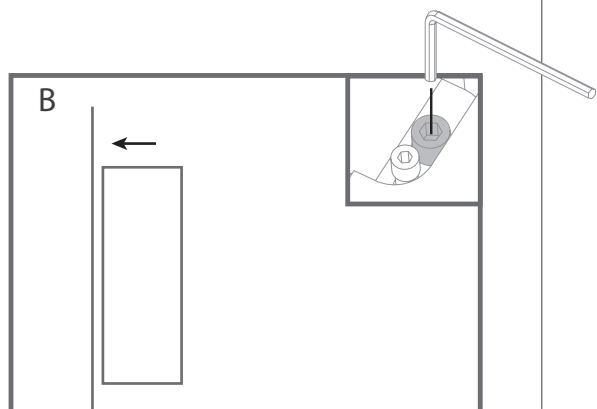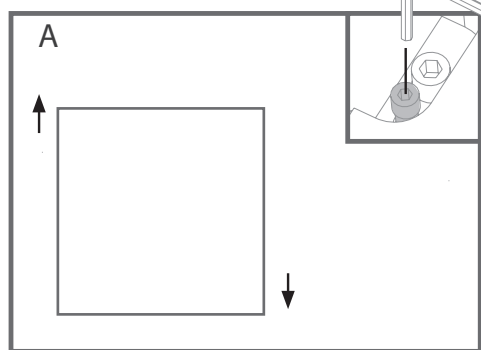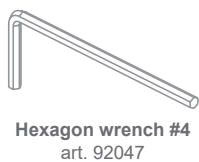    

8

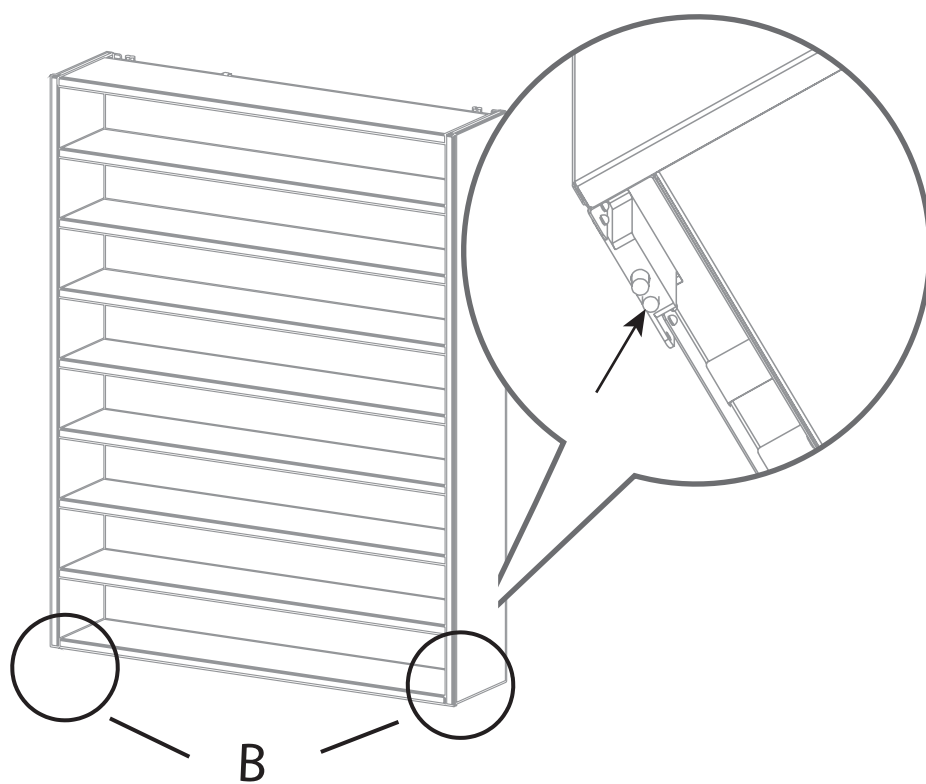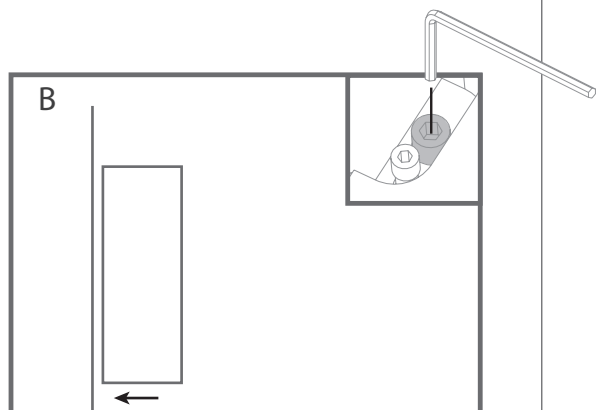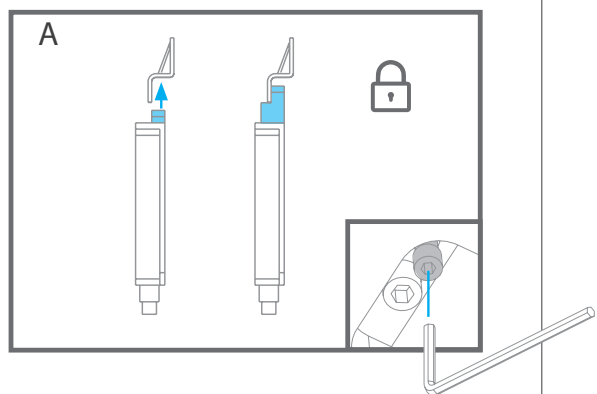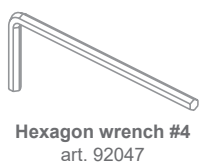    

Basic Operation

- **Short press:** Turns the light ON or OFF.

Adjusting Brightness:

 
- **Press and hold for 2 seconds** until the brightness level changes. This enters brightness adjustment mode.

- **Press again** to cycle through the 3 brightness levels.

- **The available brightness levels are:**

- 1: Low
- 2: Medium
- 3: High

After 10 seconds of inactivity, the light exits brightness adjustment mode automatically.

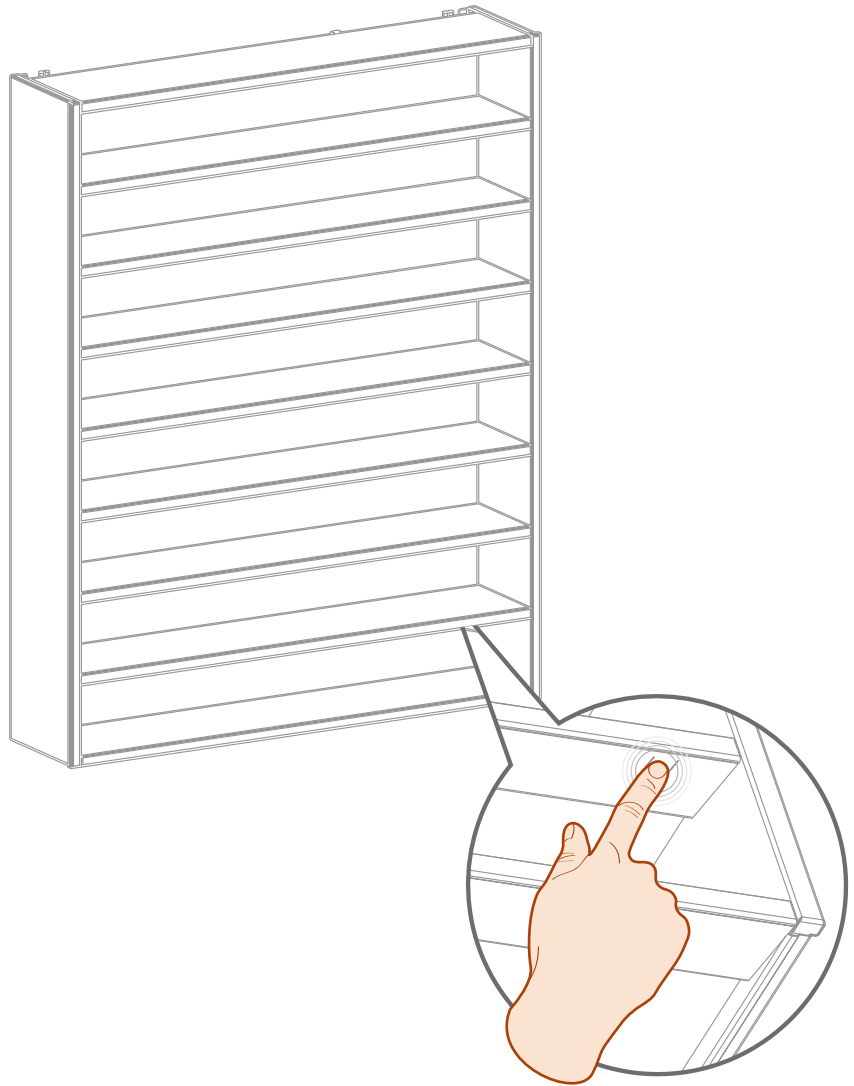

MANUAL DEL USUARIO: GUÍA DE FUNCIONAMIENTO DE LA LUZ

Funcionamiento básico

- **Pulsación breve:** enciende o apaga la luz.

Ajuste del brillo:

- **Mantenga pulsado durante 2 segundos** hasta que cambie el nivel de brillo. Esto permite ingresar al modo de ajuste de brillo.

- **Pulse nuevamente** para recorrer los 3 niveles de brillo.

- **Los niveles de brillo disponibles son:**

- 1: Bajo
- 2: Medio
- 3: Alto

Después de 10 segundos de inactividad, la luz sale automáticamente del modo de ajuste de brillo.